



ABN 34 629 668 074

RECOMMENDED CLAY TARGET TRAP SETUP & LOADING GUIDELINES

- a) Only authorised personal to adjust or load traps
- b) Always follow manufactures instructions
- c) Always use correct lifting techniques
- d) Ensure range or stand is closed for any setup or adjustments
- e) Always approach traps from safe zone (generally from behind)
- f) Evaluate location and type of trap i.e. is there safe access to the trap, is the trap fit for purpose, will it be stable, is there enough clearance, is it left or right throwing etc.
- g) Check proposed flight zone is clear and safe, allow for expected weather changes, broken clay fallout etc.
- h) Check trap is disarmed
- i) Disconnect power supply
- j) Check all adjustments are tight i.e., elevation, tilt, and spring etc
- k) Load trap evenly in each column to keep trap balanced at all times
- l) Check throwing arm is clear of obstructions.
- m) Connect remote controls if used, place receiver in safe zone.
- n) Connect power supply (AC or DC) ensure connection point is in safe zone behind trap and opposite side to throwing arm direction if possible.
- o) Ensure flight path is clear then test trap. If adjustment is required follow steps g & h prior to any adjustment.
- p) Test trap from shooting stand, if satisfied reopen stand or range. If not stand or range must remain closed.